

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
Agfa	X6, 7, 18, 25, 28, 29	●					Canon	NP6317, 6320, 6512,	●		●	
Agfa	X38, 45, 58, 88		⊙	●	⊙		Canon	NP6612	●		●	
Agfa	X100, X110, X120	●	⊙				Canon	NP6621, NP6625	●			
Agfa	X200, 210, 220, 300	●	⊙			●	Canon	NP6630, 6650, 6840, 6850			●	⊙
Agfa	X303, 320, XD320			●	●		Canon	NP6885, 8070, 8530			●	⊙
Agfa	X310, 410, 420			●	⊙		Canon	NP8570, 8580			●	⊙
Agfa	X510, 520			●	⊙		Canon	NP9085, 9100			●	⊙
Agfa	X600, 620			●	⊙		Canon	NP9800, 9850			●	⊙
Agfa	X800, 805, 820			●	⊙		Canon	iR400, iR1210, iR1230, iR1270F			●	⊙
Agfa	X910			●	⊙		Canon	iR1600, iR1610F, iR1700, iR2000			●	⊙
							Canon	iR2200, iR2270, iR2800, iR3300			●	⊙
AM	3110	●				●	Canon	iR3250, iR3570, iR4570, iR5000			●	⊙
AM	4021, 4351, 4452, 4521		⊙	●		●	Canon	iR6000, iR7200, iR8500			●	⊙
AM	4651		⊙	●		●	Canon	iR105, iR105+, iR110, iR125			●	⊙
AM	5121, 5131, 5151		⊙	●		●	Canon	iR150VP, iR85+, iR8070, iR9070			●	⊙
AM	5222, 5610, 5620	●				●	Canon	iR1018, 1022A/F//iF, 2018/I	●	□		
AM	7130			●	⊙		Canon	iR2022/ I, 2025, 2030/I, 3025N	●		□	
AM	9012, 9013, 9017, 9025			●	⊙		Canon	iR3045N, iR5055N, 5065N			●	□
AM	9032, 9040, 9042			●	⊙		Canon	iR5075N, MF7170i			●	□
AM	9060, 9076	●	⊙			●	Canon	iR7086, 7095, 7105			●	□
AM	9110			●	⊙							
AM	9153	●	⊙				Copyer-Selex	GR60, 124	●			
AM	9213, 9215			●	⊙		Copyer-Selex	GR1060, 1120, 1160	●			
AM	9227, 9233, 9272, 9280	●	⊙			●	Copyer-Selex	GR1260, 1400, 1450	●			
AM	9320, 9322			●	⊙		Copyer-Selex	GR1650, 1750	●			
AM	9345, 9355, 9365			●	⊙		Copyer-Selex	GR2010, 2250	●	⊙		
							Copyer-Selex	GR2650			●	⊙
Canon	FC Series	●					Copyer-Selex	GR3000, 3100, 3300			●	⊙
Canon	PC Series	●					Copyer-Selex	GR4010			●	⊙
Canon	GP30, 30F	⊙	●			⊙	Copyer-Selex	GR4100, 4200			●	⊙
Canon	GP55 II, 160, 215	⊙	●			⊙	Copyer-Selex	GR5000, 5100			●	⊙
Canon	GP210, 215, 220, 225		●	●	●		Copyer-Selex	GR5110, 5200, 5300			●	⊙
Canon	GP335, 405, 555, 605		●	●	●		Copyer-Selex	GR6000, 6100			●	⊙
Canon	NP1010, 1020	●					Copyer-Selex	GR7080			●	⊙
Canon	NP1215, 1218	●					Copyer-Selex	GR8050			●	⊙
Canon	NP1500, 1510, 1520	●			⊙	●	Copyer-Selex	GRA2Z			●	⊙
Canon	NP1530, 1550	●			⊙	●						
Canon	NP2010, 2020	●	⊙		⊙	●	CPF	Auriga 8010	●			
Canon	NP3030, 3050	●	⊙			●	CPF	Carina 8015, 8515	●			
Canon	NP3325, 3825	●	⊙			●	CPF	Norma 8020	●	⊙		
Canon	NP4335, 4385/4385i			●	⊙		CPF	Pulsar 8030			●	⊙
Canon	NP4050, 4080			●	⊙		CPF	Ceres 8350			●	⊙
Canon	NP5060			●	⊙		CPF	Centaure 8540			●	⊙
Canon	NP6010, 6012	●					CPF	Hermes II 8050			●	⊙
Canon	NP6016, 6020	●	⊙			●	CPF	Anteres II			●	⊙
Canon	NP6025, 6028, 6030		●	●	⊙							
Canon	NP6035, 6045, 6050			●	⊙		Develop	10			●	⊙
Canon	NP6060, 6062			●	⊙		Develop	76Z, 78Z	●	⊙		●
Canon	NP6085, 6150			●	⊙		Develop	100	●	⊙		⊙
Canon	NP6112	●				●	Develop	151Z	●	⊙		⊙
Canon	NP6212, 6216	●				●	Develop	205Z, 213Z			●	⊙
Canon	NP6218, 6220	●				●	Develop	307Z			●	⊙
Canon	NP6241, 6251			●	⊙		Develop	406Z, 408Z			●	⊙
Canon	NP6312, 6521	●				●	Develop	700, 1010	●			
Canon	NP6260			●			Develop	1210, 1211, 1212	●			
Canon	NP6330	●		●			Develop	1300, 1311	●			

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
							Develop	1312, 1320	●			
Develop	1802, 1830, 1850	●	●			●	Develop	1500, 1501, 1502	●			
Develop	2001, 2100, 2150, 2350	●			⊙		Develop	1511, 1512, 1530, 1550	●			
Develop	2360, 2361	●			⊙		Develop	1531, 1831	●			
Develop	2500, 2530, 2550	●	⊙		⊙		Develop	1710, 1800, 1801	●			

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
Develop	2501, 2551, 2580	●	⊙		⊙							
Develop	3000, 3060, 3150			●	⊙		Gestetner	3535, 3943, 4210			●	⊙
Develop	3250, 3500, 3530, 3531			●	⊙		Gestetner	6002, 7502, 7130			●	⊙
Develop	3550						Gestetner	8215, 8502, 9002			●	⊙
Develop	4050, 4060, 4250, 4500			●	⊙		Gestetner	4502, 4532, 3370, 8502			●	⊙
Develop	4550, 4700, 5500, 6200			●	⊙		Gestetner	10502, 10512, 32105			●	⊙
Develop	5050, 5200			●	⊙		Gestetner	DSm651, 660, 675			●	⊙
Develop	6050, 6051		⊙	●	⊙							
Develop	6060, 6061, 6062			●	⊙		Infotec/Danka	4181MF, 4182MF, 4353MF			●	⊙
Develop	6200, 6500, 7650, 8151			●	⊙		Infotec/Danka	4452MF			●	⊙
							Infotec/Danka	4180, 4220	●			
Fuji Film	Picrostat 200, 300	●					Infotec/Danka	4201, 4251		⊙	●	⊙
Fuji Film	AP5500	●					Infotec/Danka	4270		⊙	●	⊙
							Infotec/Danka	4351, 4352, 4450, 4451			●	⊙
Gestetner	GPC1, GPC2	●					Infotec/Danka	4550, 4521, 4651			●	⊙
Gestetner	1302	●					Infotec/Danka	4700MF, 4850, 4105			●	⊙
Gestetner	1502, 1802, 2212			●	⊙		Infotec/Danka	5020	●			
Gestetner	2202, 2203	●			⊙		Infotec/Danka	5041, 5081	●			
Gestetner	2217, 2220, 2222	●			⊙		Infotec/Danka	5121, 5131, 5151	●			
Gestetner	2240, 2255			●	⊙		Infotec/Danka	5132, 5152	●			
Gestetner	2301, 2304, 2303,	●	⊙			●	Infotec/Danka	5181, 5222	●			
Gestetner	2316, 2318	●	⊙			●	Infotec/Danka	5221, 5271	●	⊙		
Gestetner	2320, 2322	●				●	Infotec/Danka	5321, 5351			●	
Gestetner	2355			●	⊙		Infotec/Danka	5401, 5403, 5501, 5502			●	
Gestetner	2313, 2315	●					Infotec/Danka	5402MF			●	
Gestetner	2332, 2335			●	⊙		Infotec/Danka	5601, 5602, 5701, 5821			●	
Gestetner	2345, 23A2Z			●	⊙		Infotec/Danka	9014	●			
Gestetner	2404, 2410Z	●					Infotec/Danka	9047, 9048, 9052			●	
Gestetner	2440, 2460, 2465			●	⊙		Infotec/Danka	9115, 9118	●			
Gestetner	2470, 2485			●	⊙		Infotec/Danka	9122, 9125	●			
Gestetner	2508, 2513	●			⊙		Infotec/Danka	9134, 9143			●	⊙
Gestetner	2515, 2518, 2520	●			⊙		Infotec/Danka	9150, 9153			●	⊙
Gestetner	2527, 2533, 2543			●	⊙		Infotec/Danka	9165, 9172			●	⊙
Gestetner	2553, 2572			●	⊙		Infotec/Danka	9208, 9213, 9215	●			
Gestetner	2580		⊙	●	⊙		Infotec/Danka	9227, 9233			●	⊙
Gestetner	2545, 2555, 2565			●			Infotec/Danka	9315, 9320, 9322	●	⊙		
Gestetner	25101			●			Infotec/Danka	9345, 9355			●	⊙
Gestetner	2607, 2706	●	⊙				Infotec/Danka	9365, 9380			●	⊙
Gestetner	2613, 2615, 2620	●	⊙			●	Infotec/Danka	A75			●	⊙
Gestetner	2622, 2627	●	⊙			●	Infotec/Danka	IS 1050, 1060			●	⊙
Gestetner	2635, 2640, 2651, 2660		⊙	●	⊙		Infotec/Danka	IS 2013, 2113, 2215	●		⊙	
Gestetner	2670, 2680, 2682		⊙	●	⊙		Infotec/Danka	IS 2022, 2027, 2122, 2127, 2132			●	⊙
Gestetner	2712, 2713, 2715, 2718, 2722	●				●	Infotec/Danka	IS 2135, 2145, 2090, 2105			●	⊙
Gestetner	2732, 2740			●	⊙							
Gestetner	27105			●	⊙		Kodak	Ektaprint 30, 50	⊙	●	●	⊙
Gestetner	2808, 2812, 2817, 2822	●				●	Kodak	Ektaprint 85, 90, 95	⊙	●	●	⊙
Gestetner	2850, 2851, 2860, 2870			●	⊙		Kodak	Ektaprint 100 Series			●	⊙
Gestetner	2913	●					Kodak	Ektaprint 220 Series			●	⊙
Gestetner	3110, 3210, 3212, 3215, 3218	●				●	Kodak	Ektaprint 225 Series			●	⊙
Gestetner	3220, 3222, 3225, 3227			●	⊙		Kodak	Ektaprint 235 Series			●	⊙
Gestetner	3235, 3240, 3245, 3255, 3265			●	⊙		Kodak	Ektaprint 300 Series			●	⊙
Gestetner	3285, 3355, 3502, 3527, 3532			●	⊙		Kodak	1392,			●	⊙
							Kodak	1570, 1575, 1580			●	⊙
Kodak	Imagesource 110, 120			●	⊙		Kodak	2085, 2110, 2120, 2130			●	⊙
Kodak	Digisource 8085, 9110			●	⊙		Kodak	3100			●	⊙
							Kodak	Imagesource 50, 80			●	⊙
Konica	112, 115, 170	●					Kodak	Imagesource 70	●			

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
Konica	225, 250	●										
Konica	404, 700, 760			●			Lanier	6532, 6540, 6550	●			
Konica	1015	●					Lanier	6610, 6613	●			
Konica	1020, 1120			●	⊙		Lanier	6614, 6616	●	⊙		
Konica	1112, 1212, 1216	●					Lanier	6625,6630, 6632	●	⊙		⊙
Konica	1312	●	⊙				Lanier	6716, 6717,6718, 6720			●	
Konica	2028, 2125			●	⊙		Lanier	6725,6735, 6745			●	
Konica	2223	●			⊙		Lanier	6755, 6765, 7100			●	⊙
Konica	3031, 3035			●	⊙		Lanier	6775	●			
Konica	3135, 3231, 3240			●	⊙		Lanier	6813	●			
Konica	3331, 3340			●	⊙		Lanier	7213, 7214, 7216	●			
Konica	4045, 4060			●	⊙		Lanier	7228, 7313	●	⊙	⊙	⊙
Konica	4145, 4155			●	⊙		Lanier	7316, 7320, 7328			●	⊙
Konica	4255, 4345, 4355			●	⊙		Lanier	7335, 7345			●	⊙
Konica	5082, 5370			●	⊙		Lanier	7355, 7365			●	⊙
Konica	6192			●	⊙		Lanier	7335, 7345			●	⊙
Konica	7015, 7020, 7022, 7024	●	●			⊙	Lanier	7355, 7365			●	⊙
Konica	7030, 7033, 7035		●	●	⊙		Lanier	7375, 7385			●	⊙
Konica	7040, 7045, 7050, 7055			●	⊙		Lanier	7728			●	⊙
Konica	7055, 7060, 7065, 7075, 7085			●	⊙		Lanier	LD035, LD045, LD055, LD060			●	⊙
Konica	7115, 7118	●				⊙	Lanier	LD075, LD090, LD0105, LD160			●	⊙
Konica	7130, 7135, 7145, 7150, 7155			●	⊙		Lanier	LD151, LD175			●	⊙
Konica	7165			●	⊙							
Konica	7310, 7410, 7415,	●				⊙	Minolta	Di30, 150, 151, 181	⊙	⊙	●	⊙
Konica	7528	●					Minolta	Di152, 183	●	⊙		
Konica	DI 3010, 3510f			●	⊙		Minolta	Di251f, 351f			●	⊙
Konica	DI 5510, 7255, 7255, 7210, 7286			●	⊙		Minolta	Di200, 250, 251, 350, 450, 470			●	⊙
Konica	bizhub 160f, 161f	●					Minolta	Di520, 550, 551, 620, 650, 750			●	⊙
Konica	bizhub PRO 920, 1050		⊙	●	⊙		Minolta	Di850			●	⊙
Konica	bizhub 130f, 160, 162, 210	●	□	□			Minolta	DC6500, 8095			●	⊙
Konica	bizhub 250, 350, 420, 500			●	□		Minolta	EP30, 70	●			
Konica	bizhub 600, 750			●	□		Minolta	EP370, 450, 490	●			
							Minolta	EP805			●	⊙
Lanier	5020	●		⊙	⊙							
Lanier	5025	⊙		●	⊙		Minolta	EP1030, 1031, 1050	●			
Lanier	5112	●				●	Minolta	EP1052, 1054, 1080	●			
Lanier	5040, 5235, 5245			●	⊙		Minolta	EP1083, 1085	●			
Lanier	5218	●		⊙	⊙		Minolta	EP1832	●			
Lanier	5222, 5227			●	⊙		Minolta	EP2010, 2030, 2050	⊙	⊙	●	⊙
Lanier	5255, 5265		⊙	●	⊙		Minolta	EP2051, 2080			●	⊙
Lanier	5515, 5518		⊙	●	⊙		Minolta	EP3010, 3050, 4050			●	⊙
Lanier	5613, 5613F, 5618, 5622, 5627			●	⊙		Minolta	EP2100, 2121	●	⊙		⊙
Lanier	5632, 5635, 5645, 5685, 5701			●	⊙		Minolta	EP2150, 2151	●	⊙		⊙
Lanier	6020			●	⊙		Minolta	EP2130, 2131	●	⊙	⊙	⊙
Lanier	6070	●				●	Minolta	EP2152, 2153	●	⊙	⊙	⊙
Lanier	6110, 6112	●				●	Minolta	EP3120, 3150, 3170	⊙	⊙	●	
Lanier	6113, 6115			●	⊙		Minolta	EP4000, 4210, 4232			●	⊙
Lanier	6126, 6130, 6155	●	⊙			●	Minolta	EP4233, 4250			●	⊙
Lanier	6213, 6215			●	⊙		Minolta	EP4300, 4320			●	⊙
Lanier	6230, 6242			●	⊙		Minolta	EP5000, 5325			●	⊙
Lanier	6260, 6360	●				●	Minolta	EP5400, 5425			●	⊙
Lanier	6315, 6413, 6414,			●	⊙		Minolta	EP6000, 6001			●	⊙
Lanier	6425, 6426, 6432			●	⊙		Minolta	EP8010, 8015			●	⊙

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
Lanier	6450, 6483	●				●	Minolta	EP8600, 8601			●	⊙
Lanier	6514, 6517, 6525			●	⊙		Minolta	EP8602, 8605			●	⊙
							Minolta	EP9765			●	⊙
Mita	AC6500	⊙	⊙	⊙		●						
Mita	AC9500	⊙	⊙	⊙		●	Nashuatec	3708, 3718, 3722	●			
Mita	CC10, 20, 30, 35	●					Nashuatec	3732, 3740			●	⊙
Mita	CC 50, 55, 60	●					Nashuatec	8505			●	⊙
Mita	DC1205, 1215, 1255	●					Nashuatec	37105			●	⊙
Mita	DC 1256, 1257, 1260	●					Nashuatec	10505, 10515			●	⊙
Mita	DC1405, 1415	●					Nashuatec	4050			●	⊙
Mita	DC1435, 1455	●					Nashuatec	4172			●	⊙
Mita	DC1460, 1470	●					Nashuatec	4280			●	⊙
Mita	DC1555, 1556	●					Nashuatec	4345, 4355, 4365			●	⊙
Mita	DC1560	●			⊙	●	Nashuatec	4580, 4582, 4651			●	⊙
Mita	DC1605, 1656, 1657	●			⊙	●	Nashuatec	4660, 4670			●	⊙
Mita	DC1685, 162ZS	●			⊙	●	Nashuatec	4851, 4860, 4870			●	⊙
Mita	DC1755	●				●	Nashuatec	53101			●	⊙
Mita	DC1824ZS, 1855	●			⊙	●	Nashuatec	7125, 7150, 9005			●	⊙
Mita	DC1860, 2050	●			⊙	●	Nashuatec	8103/C, 8112/RE	●			
Mita	DC2060, 2155	●	⊙			●	Nashuatec	8120, 8122/S	●			
Mita	DC2254, 2255, 2285	●	⊙			●	Nashuatec	DSm 415f/p/pf, 516pf, 615	●			
Mita	DC2355, 2360	●	⊙				Nashuatec	DSm 618d, 622, 627, 627, 632			●	⊙
Mita	DC2550, 2556,	●	⊙			●	Nashuatec	DSm 635, 651, 660, 675			●	⊙
Mita	2557, 2560	●	⊙			●	Nashuatec	MP1600L, 161/L, 2000LN	●	□		
Mita	DC3055, 3060			●	⊙		Nashuatec	SP 1000SF/S, 3200SF	●	□		
Mita	DC3225, 3285			●	⊙		Nashuatec	DSm520PF	●	□		
Mita	DC3555, 3585			●	⊙		Nashuatec	MP1600, 1500, 2000, 2500/LN	●	□		
Mita	DC3755, 3785			●	⊙		Nashuatec	MP2510/ SP, 2550, 3350, 3500			●	□
Mita	DC4056, 4060			●	⊙		Nashuatec	MP4000, 4500, 5000, 5500			●	□
Mita	DC4555, 4585			●	⊙		Nashuatec	MP6500, 7500, 9000, 1100			●	□
Mita	DC4655, 4685			●	⊙		Nashuatec	MP1350			●	□
Mita	DC5090, 5590			●	⊙							
Mita	DC5655, 5660			●	⊙		Oce	2025, 2040	●	⊙		
Mita	DC5685, 5960			●	⊙		Oce	2050, 2075	●	⊙		
Mita	DC6090, 7090			●	⊙		Oce	2060			●	⊙
Mita	DC8090, 8585, 9285			●	⊙		Oce	2125, 2140, 2170	●	⊙		
Mita	PS Vi150, 80	●		⊙	⊙	●	Oce	2200, 2210, 2220			●	⊙
Mita	PS Vi 155, 200	●	⊙		⊙		Oce	2225, 2227			●	⊙
Mita	PS Vi 230, 300, 310			●	⊙	●	Oce	2330, 2235			●	⊙
Mita	PS Vi 400, 500, 550			●	⊙	●	Oce	2250, 2270, 2275			●	⊙
							Oce	2375			●	⊙
Nashuatec	R120, 130	●					Oce	2400, 2450			●	⊙
Nashuatec	D415, 418, 420, 422		⊙	●	⊙	⊙	Oce	2465, 2475			●	⊙
Nashuatec	D425, 427, 435, 418		⊙	●	⊙	⊙	Oce	2500, 2600			●	⊙
Nashuatec	D440, 445, 455, 465,485			●	⊙	⊙	Oce	3012, 3018, 3023	●			
Nashuatec	D510, D3640, D4850			●	⊙	⊙	Oce	3045, 3055, 3075			●	⊙
Nashuatec	1305, 1315, 1505	●		⊙			Oce	3100, 3110, 3121, 3122			●	⊙
Nashuatec	1805, 2205, 2705			●	⊙		Oce	3133, 3140, 3145			●	⊙
Nashuatec	2208, 2407	●					Oce	3155, 3160, 3165			●	⊙
Nashuatec	2304	●					Oce	Book Copier, DPS400			●	⊙
Nashuatec	3018, 3120	●	⊙			●	Oce	OP 22			●	⊙
Nashuatec	3115	●					Oce	VarioPrint 2050, 2070, 2090			●	⊙
Nashuatec	3133, 3135			●	⊙							
Nashuatec	3213, 3220	●				●	Oki	Officeoffice 120	●			
Nashuatec	3222, 3227, 3320	●	⊙									
Nashuatec	3413, 3415	●					Olivetti	d-Copia MF15, 20, 23	●			
Nashuatec	3522, 3527	●	⊙				Olivetti	d-Copia 31, 42, 52			●	⊙

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
Nashuatec	3525, 3535, 3543			●	⊙		Olivetti	d-Copia 120, d-Copia 150	●			
Nashuatec	3612, 3713, 3715	●				●	Olivetti	d-Color 200MF	●		⊙	
Olivetti	Copia 8130			●	⊙		Olivetti	Copia 2008	●			
Olivetti	Copia 8512, 8515, 8516	●			⊙		Olivetti	Copia 7014, 7025	●	⊙		
Olivetti	Copia 8520	●			⊙		Olivetti	Copia 7147, 7064			●	⊙
Olivetti	Copia 8521, 8530	●			⊙		Olivetti	Copia 8004, 8006, 8010	●			
Olivetti	Copia 8540, 8550			●	⊙		Olivetti	Copia 8005, 8012, 8015	●			
Olivetti	9004, 9017, 9020, 9021	●					Olivetti	Copia 8020, 8021	●	⊙		
Olivetti	9051, 9060			●	⊙		Olivetti	Copia 8025, 8028, 8030			●	⊙
Olivetti	9814	●			⊙		Olivetti	Copia 8041, 8045			●	⊙
Olivetti	9825, 9832			●	⊙		Olivetti	Copia 8035, 8040, 8050			●	⊙
Olympia	Omega Compact 10, 20	●					Panasonic	FP5060			●	⊙
Olympia	Omega Compact 30, 35	●					Panasonic	FP6070			●	⊙
Olympia	Omega Compact 50, 55	●					Panasonic	FP7113, 7115	●			
Olympia	Omega Compact 60	●					Panasonic	FP7117, 7121	●			
Olympia	Omega D150, 151, 152	●					Panasonic	FP7127, 7133			●	⊙
Olympia	Omega D181	●					Panasonic	FP7140, 7160			●	⊙
Olympia	Omega D202						Panasonic	7713, 7715	●			
Olympia	Omega D200, 300, 310	⊙	●				Panasonic	FP7718, 7722, 7728	●	⊙		⊙
Olympia	Omega 2510, 2530	●	⊙		⊙	●	Panasonic	FP7735, 7742, 7750			●	⊙
Olympia	Omega 3010, 3020			●	⊙	⊙	Panasonic	7760, 7781			●	⊙
Olympia	Omega 3500, 3700			●	⊙	⊙	Panasonic	FP-7813, 7818, 7824	⊙		●	⊙
Olympia	Omega 4020, 4500			●	⊙	⊙	Panasonic	FP-7835, 7850			●	⊙
Olympia	Omega 4010, 4600			●	⊙		Rex Rotary	1015, 1018, 1035, 1045			●	⊙
Olympia	Omega 5120			●	⊙		Rex Rotary	1085, 1105, 10518			●	⊙
Olympia	Omega 5600, 6010			●	⊙		Rex Rotary	1308, 1808, 2238, 2738			●	⊙
Olympia	Omega 7010, 8600			●	⊙		Rex Rotary	2955, 3508, 4508			●	⊙
Panasonic	DF1100	●					Rex Rotary	2304, 2110, 2115, 2815	●			
Panasonic	DP150, 1510, 1810, 2000, 2010			●	⊙		Rex Rotary	2818, 2820, 2822	⊙	●	⊙	⊙
Panasonic	DP2500,3000, 3510, 4510,7000			●	⊙		Rex Rotary	2825, 2827	⊙	●	⊙	⊙
Panasonic	DP2330, 3030, 3530, 4530, 6030			●	⊙		Rex Rotary	2835, 2840, 2845			●	⊙
Panasonic	FP D250,350,355,450,455,600,605			●	⊙		Rex Rotary	2855, 2865, 2885, 2955			●	⊙
Panasonic	FP820, 830	●					Rex Rotary	3110, 4210	●			
Panasonic	FP1270, 1275	●					Rex Rotary	7315, 7320, 7340			●	⊙
Panasonic	FP1307, 1370	●					Rex Rotary	8008, 8014, 8015	●			
Panasonic	FP1510, 1570	●				●	Rex Rotary	8020, 8022, 8025			●	⊙
Panasonic	FP1620, 1670	●			●	●	Rex Rotary	8035, 8045,			●	⊙
Panasonic	FP1680	●				●	Rex Rotary	8055			●	⊙
Panasonic	FP1780	●				●	Rex Rotary	8017, 8018, 8021	●			
Panasonic	FP2080	●	⊙			●	Rex Rotary	8056, 8070, 8080, 8085			●	⊙
Panasonic	FP2230	●	⊙			●	Rex Rotary	8110, 8118, 8125, 8135	●	⊙		
Panasonic	FP2670, 2680	●	⊙				Rex Rotary	8212, 8215	●	⊙		⊙
Panasonic	FP3037, 3270, 3380			●	⊙		Rex Rotary	8137, 8140, 8146			●	⊙
Panasonic	FP4080, 4630			●	⊙		Rex Rotary	8230, 8232, 8240, 8250			●	⊙
Panasonic	DP8020, 3030	●	□				Rex Rotary	8314	●			
Panasonic	DP3530, 8045, 8060			●	□		Rex Rotary	8316	●			
Ricoh	MV310, MV710	●					Rex Rotary	8330			●	⊙
Ricoh	Aficio 120, 150, 180, 200, 220	●	⊙	⊙			Rex Rotary	8508	●			
Ricoh	Aficio 250, 270	●	●	●			Rex Rotary	8513, 8515, 8518	●	⊙		
Ricoh	Aficio 340, 350	⊙	●	●	⊙		Rex Rotary	8520	●	⊙		⊙
Ricoh	Aficio 400, 401, 450	⊙	●	●	⊙		Rex Rotary	8522, 8527, 8533			●	⊙
Ricoh	Aficio 500, 550, 650	⊙	●	●	⊙		Rex Rotary	8543, 8545			●	⊙
Ricoh	Aficio 551, 700, 850	⊙	●	●	⊙		Rex Rotary	8553, 8555, 8565			●	⊙
							Rex Rotary	8580, 8651			●	⊙
							Rex Rotary	8607, 8612	●			

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
Ricoh	Aficio 3506	●					Rex Rotary	8613, 8615, 8622	●			⊙
Ricoh	Aficio 1015, 1018			●	⊙		Rex Rotary	8627, 8635, 8670	●	⊙		⊙
Ricoh	Aficio 1022, 1027, 1032, 1035			●	⊙		Rex Rotary	8708, 8713, 8715, 8718	●			
Ricoh	Aficio 1045, 1055, 1060, 1075			●	⊙		Rex Rotary	8715, 8722	●		●	
Ricoh	Aficio 1085, 1105, 2035, 2045			●	⊙		Rex Rotary	8732, 8740			●	⊙
Ricoh	Aficio 2051, 2060, 2075			●	⊙		Rex Rotary	87105			●	⊙
Ricoh	MP161F/SPF, 2000/LN/sp	●	□				Rex Rotary	8913	●			
Ricoh	MP1600/L,sp	●	□				Rex Rotary	8851, 8860, 8870, 9008			●	⊙
Ricoh	MP2500/LN,SP, 2510/AD/P/SP			●	□		Rex Rotary	10508			●	⊙
Ricoh	MP2550B/BADR, 3010/AD/P/SP			●	□		Rex Rotary	MP1600L, 161/L, 2000LN	●	□		
Ricoh	MP3550B/BADR, 3500/AD/P/SP			●	□		Rex Rotary	SP 1000SF/S, 3200SF	●	□		
Ricoh	MP4000/B/BADR, 4500/AD/P/SP			●	□		Rex Rotary	DSm520PF	●	□		
Ricoh	MP5000/BADR, 5500/SP, 6500/SP			●	□		Rex Rotary	MP1600, 1500, 2000, 2500/LN	●	□		
Ricoh	MP7500/SP, 9000, 1100, 1350			●	□		Rex Rotary	MP2510/ SP, 2550, 3350, 3500			●	□
Ricoh	DA5840			●	⊙		Rex Rotary	MP4000, 4500, 5000, 5500			●	□
Ricoh	DS320, 5320	●	⊙			●	Rex Rotary	MP6500, 7500, 9000, 1100			●	□
Ricoh	DS5330			●	⊙		Rex Rotary	MP1350			●	□
Ricoh	FT1008, 1208	●				●						
Ricoh	FT2012, 2212, 2260	●				●	Ricoh	LR1, M50, M60	●			
Ricoh	FT3013	●										
Ricoh	FT3213	●				●	Sanyo	SFT-146, 160			●	⊙
Ricoh	FT3313, 3320	●					Sanyo	SFTZ-98, 223	●			
Ricoh	FT3513, 3713, 4015	●				●	Sanyo	SFT-1115	●			
Ricoh	FT3613, 3813	●				●	Sanyo	SD3060			●	⊙
Ricoh	FT4018	●				●						
Ricoh	FT4027, 4127, 4527			●	⊙		Sharp	Z 20, 21, 25, 26, 30, 52	●			
Ricoh	FT4022, 4215	●				●	Sharp	Z 70, 75, 76, 88	●			
Ricoh	FT4220, 4222	●	⊙			●	Sharp	Z 810, 830, 845	●			
Ricoh	FT4227, 4470			●	⊙		Sharp	AC series	●			
Ricoh	FT4490, 4727			●	⊙		Sharp	AL 800, 840, 1000			●	⊙
Ricoh	FT4415, 4418	●			⊙	●	Sharp	AL1200, 1220, 1520			●	⊙
Ricoh	FT4420, 4421	●	⊙		⊙	●	Sharp	AR 120E, 121, 122E, 150, 151				
Ricoh	FT4422, 4522	●	⊙		⊙	●	Sharp	AR 155, 156, 163, 206, 235				⊙
Ricoh	FT4430, 4460	●	⊙			●	Sharp	AR 275, 287			●	⊙
Ricoh	FT4527			●	⊙		Sharp	AR 407, 507			●	⊙
Ricoh	FT4615, 4618	●		●			Sharp	AR 161, 200, 205, 250	⊙	●		⊙
Ricoh	FT4622, 4822	●		●			Sharp	AR280, 285, 286			●	⊙
Ricoh	FT5000, 5035, 5135			●			Sharp	AR 551, 651, 700, 810, 850			●	⊙
Ricoh	FT5233, 5433			●	⊙		Sharp	AR335, 336, 337			●	⊙
Ricoh	FT5535, 5540, 5550			●	⊙		Sharp	AR M207, 350, 450			●	⊙
Ricoh	FT5570, 5590			●	⊙		Sharp	AR5040, 5125, 5132			●	⊙
Ricoh	FT5632, 5640			●	⊙		Sharp	MX550U, 620U, 700U, 950, 1100			●	□
Ricoh	FT5733, 5832, 5840			●	⊙		Sharp	SF1025	●	⊙		
Ricoh	FT6620, 6645, 6655			●	⊙		Sharp	SF2010, 2014, 2020	●			
Ricoh	FT6665, 6750			●	⊙		Sharp	SF2022, 2025, 2027	●	⊙		
Ricoh	FT7650, 7660, 7670			●	⊙		Sharp	SF2030, 2035			●	⊙
Ricoh	FT7770, 7870			●	⊙		Sharp	SF2040, 2050, 2052			●	⊙
Ricoh	FT7950, 7960, 7970			●	⊙		Sharp	SF2114, 2116, 2118	●			
Ricoh	FT8780, 8880			●	⊙		Sharp	SF2120, 2214	●	⊙		
Ricoh	FT8980, 8982			●	⊙		Sharp	SF2216, 2218,	●	⊙		
Ricoh	FT9101, 9110			●	⊙		Sharp	SF2220, 2320	●	⊙		
							Sharp	SF2150			●	⊙
Sanyo	SFT-50, 55, 62, 65, 66	●					Sharp	SF2314, 2414, 2514	●	⊙		
Sanyo	SFT-75, 76, 80, 90	●					Sharp	SF2530, 2540			●	⊙
Sanyo	SFT-76	●					Sharp	SF6100	●	⊙		
Sanyo	SFT-92, 95, 96	●				●	Sharp	SF7320	●	⊙		
Sanyo	SFT-125, 126	●				●	Sharp	SF7370, 7800, 7850	●	⊙		

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
							Sharp	SF8300, 8350, 8400	●	⊙		⊙
Toshiba	BD2540, 2810	●				●	Sharp	SF8570, 8870			●	⊙
Toshiba	BD2050, 2060	●			⊙	●	Sharp	SF9400, 9800			●	⊙
Toshiba	BD2500, 2550			●	⊙		Sharp	SD2060, 2075			●	⊙
Toshiba	BD2860	●			⊙	●	Sharp	SD2260, 2275			●	⊙
Toshiba	BD3210, 3220, 3240			●	⊙		Sharp	SD3062, 3076			●	⊙
Toshiba	BD3550, 3560			●	⊙		Sharp	SD4085			●	⊙
Toshiba	BD3810, 3910			●	⊙							
Toshiba	BD3850			●	⊙		Toshiba	e-studio 12, 15	●			
Toshiba	BD4010, 4550, 4560			●	⊙		Toshiba	e-studio16, 20	⊙		●	⊙
Toshiba	BD4910			●	⊙		Toshiba	e-studio25, 28, 35, 45			●	⊙
Toshiba	BD5010, 5020, 5120			●	⊙		Toshiba	e-studio55, 550, 65, 650, 80, 810			●	⊙
Toshiba	BD5540, 5560, 5910			●	⊙		Toshiba	e-studio 151D, 161	●			
Toshiba	BD6550, 6560			●	⊙		Toshiba	e-studio 230L, 280, 350, 450, 520			●	⊙
Toshiba	BD7650, 7660, 7910			●	⊙		Toshiba	e-studio 600, 720, 850			●	⊙
Toshiba	BD8050, 8510			●	⊙		Toshiba	BD1210, 1310	●			
Toshiba	BD9050, 9100			●	⊙		Toshiba	BD1340, 1350	●			
Toshiba	BD9230, 9240, 9260			●	⊙		Toshiba	BD1360, 1370, 1550	●			
Toshiba	DP1250, 1450, 1570	●			⊙		Toshiba	BD1650,1710	●			⊙
Toshiba	DP2460, 2570, 3580			●	⊙		Toshiba	BD2310, 2510,	●	⊙		⊙
Toshiba	DP4580, 8070			●	⊙		Toshiba	E-STUDIO120, 150, 162/D, 163	●	□		
Toshiba	5570, 6570			●	⊙		Toshiba	e-studio165, 166,167, 205, 207	●	□		
							Toshiba	e-studio202L, 232, 237, 282,			●	□
Triumph Adler	DC 140D	●					Toshiba	e-studio352, 452			●	□
Triumph Adler	DC 300	●					Toshiba	e-studio 1050, 1101, 1351, 520T			●	□
Triumph Adler	2002, 2004	●					Toshiba	e-studio 600/T, 720/T, 850, 900,			●	□
Triumph Adler	2008, 2210	●					Toshiba	e-studio 901			●	□
Triumph Adler	2012, 2212, 2512	●										
Triumph Adler	2014, 2015, 2214	●					Utax	C174	●			
Triumph Adler	2016, 2215, 2216	●					Utax	C184, 185, 187	●			
Triumph Adler	2017	●				●	Utax	C208, 218, 219	●			⊙
Triumph Adler	2018, 2218	●			⊙		Utax	C234, 237	●			⊙
Triumph Adler	2022, 2222, 2223	●				●	Utax	C250, 252, 254	●			⊙
Triumph Adler	1015, 1115, 2020, 1215	●					Utax	C259, 264	●			⊙
Triumph Adler	2023, 2031	●					Utax	C 294, 307, 320, 322			●	
Triumph Adler	2040, 2050			●	⊙		Utax	C360, 362, 370, 372			●	⊙
Triumph Adler	2025, 2225	●				●	Utax	C404, 407, 450			●	⊙
Triumph Adler	2030, 2130, 2232			●	⊙		Utax	C452, 455, 465			●	⊙
Triumph Adler	2035, 2235			●	⊙		Utax	C518, 544, 556, 562			●	⊙
Triumph Adler	2040, 2140			●	⊙		Utax	C612, 712, 804, 812			●	⊙
Triumph Adler	2052, 2055			●	⊙		Utax	CD15, 20, 21, 23	⊙	●		
Triumph Adler	2060, 2070			●	⊙		Utax	CD31, 37, 41, 51, 55			●	⊙
Triumph Adler	2245, 2245			●	⊙		Utax	CD1015, 1020	●			
Triumph Adler	2246, 2250			●	⊙		Utax	CD1025, 1035, 1042, 1045	⊙	●		
Triumph Adler	2310, 2312	●					Utax	CD1052, 1055, 1062, 1115, 1125			●	⊙
Triumph Adler	2414, 2416	●					Utax	CD1215			●	⊙
Triumph Adler	2525	●		⊙		●	Utax	ARCHI II	●			
Triumph Adler	2614, 2616	●										
Triumph Adler	3016, 3120, 3121	●				●	Xerox	XC/XD/XE/P series				
Triumph Adler	3017			●	⊙		Xerox	1012, 1025				
							Xerox	1038, 1040, 1045, 1048				
Utax	C40, 44, 88, 89, 90	●					Xerox	1050, 1055, 1065			●	⊙
Utax	C96, 98	●					Xerox	1075, 1090			●	⊙
Utax	C123, 124, 125, 126	●					Xerox	4450			●	
Utax	C127, 128, 140, 144	●					Xerox	5009, 5012				
Utax	C145, 148, 149	●				●	Xerox	5014, 5018				
Utax	C154, 155, 157	●				●	Xerox	5025, 5028			●	⊙

Compatibility Guide - ICI Imagedata - 2008

Section: Monochrome Copier Films

● = Recommended product, ⊙ = Alternate Choice

Brand	Model	PPC1000	PPC2000	PPC1020	NA	PPC1080	Brand	Model	PPC1000	PPC2000	PPC1020	NA
							Xerox	5034, 5042			●	⊙
Xerox	5892, 5895, 5900, 5900i			●	⊙		Xerox	5046, 5047			●	⊙
Xerox	5995			●	⊙		Xerox	5051, 5052, 5053			●	⊙
Xerox	8200, 8300			●	⊙	●	Xerox	5058, 5065			●	⊙
Xerox	9200, 9400			●	⊙	●	Xerox	5088, 5090, 5100			●	⊙
Xerox	9500, 9600			●	⊙	●	Xerox	Docutech Series (DCS)			●	⊙
Xerox	Copycentre C118, C123, C128	⊙		●	⊙	●	Xerox	5201, 5203, 5220				
Xerox	Copycentre 232, 238, 245, 255			●	⊙	●	Xerox	5305, 5309, 5310				
Xerox	Copycentre 265, 275, 430DC			●	⊙	●	Xerox	5312, 5314				
Xerox	DocuCentre 212, 214			●		●	Xerox	5317, 5320				⊙
Xerox	DocuCentre 220, 230			●			Xerox	5321, 5322				⊙
Xerox	DocuCentre 255, 265			●	⊙	⊙	Xerox	5328, 5334			●	⊙
Xerox	DocuCentre 332, 340, 416			●	⊙	⊙	Xerox	5340, 5343			●	⊙
Xerox	DocuCentre 425, 432, 440ST			●	⊙	⊙	Xerox	5345, 5350			●	⊙
Xerox	DocuCentre 470, 480, 490			●	⊙	⊙	Xerox	5352, 5355			●	⊙
Xerox	DocuCentre 535, 545, 555			●	⊙	⊙	Xerox	5365, 5385, 5390			●	⊙
Xerox	Workcentre Pro 123, 128, 232			●	⊙	⊙	Xerox	5380			●	⊙
Xerox	Workcentre Pro 238, 265, 275			●	⊙	⊙	Xerox	5435, 5437			●	⊙
Xerox	WorkCentre Pro 412, 416E			●	⊙	⊙	Xerox	5441, 5451			●	⊙
Xerox	WorkCentre Pro 416DE, 416Si			●	⊙	⊙	Xerox	5614, 5621, 5622				
Xerox	WorkCentre Pro 421E, 421DE			●	⊙	⊙	Xerox	5665, 5680			●	⊙
Xerox	WorkCentre Pro 421DEi, 421Pi			●	⊙	⊙	Xerox	5690, 5692			●	⊙
Xerox	WorkCentre Pro 423i, 428i			●	⊙	⊙	Xerox	5800			●	⊙
Xerox	WorkCentre Pro 423Pi, 428Pi			●	⊙	⊙	Xerox	5815				
Xerox	WorkCentre Pro 657			●	⊙	⊙	Xerox	5824, 5826				⊙
Xerox	Workcentre PE120/I	●	⊙				Xerox	5828, 5830			●	⊙
Xerox	Workcentre M118, 123, 128			●	⊙	⊙	Xerox	5837, 5845, 5855, 5885			●	⊙
Xerox	Workcentre M35, 45, 55, 245, 255			●	⊙	⊙	Xerox	Copycentre C20, C118, 123, 128	●	□		
							Xerox	Workcentre 5632, 5638, 4150			●	□
							Xerox	Workcentre 5645, 5655, 5665			●	□
							Xerox	Workcentre 5665, 5675, 5687			●	□
							Xerox	4595, 4112, 4127			●	□